





Joyrider™ & Deuce Coupe™ Jogging Stroller Owner's Manual and Instructions

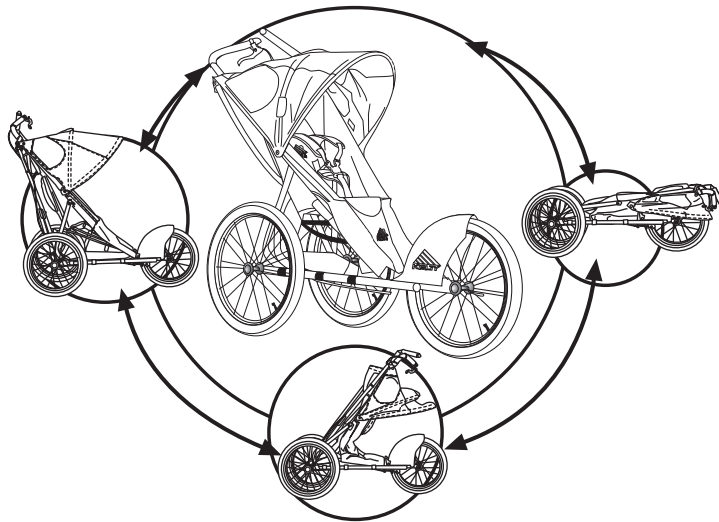


Please read all instructions before using this product and save these instructions for future use.

If you have any questions at all about your stroller, regarding the proper use of the jogging stroller, or the instructions, please call Kelty Customer Service at 1-800-423-2320.

Special features of the Kelty K.I.D.S. jogging strollers

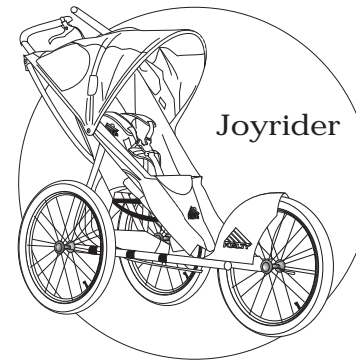

Joyrider

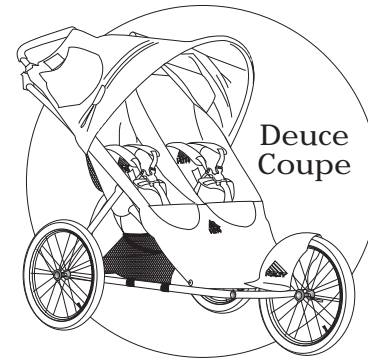

Deuce Coupe

- Folds easily with one hand
- Jogging Stroller becomes narrower when folded
- Removable, expandable canopy provides weather/sun protection
- Sneak-A-Peak canopy window allows view of child
- Lightweight, strong aluminum frame holds up on tough terrain
- Push-button quick release back wheels for easy storage
- Bike-style hand brake can be locked for parking
- Handy underseat basket provides additional storage
- Quick release front wheel for easy storage
- Front fender protects child from road debris
- Safe five-point harness grows with child (Deuce Coupe comes with two)



Warning

Read all instructions and all warnings before using. If instructions are lost or missing, call Kelty at 1-800-423-2320 or log on to www.kelty.com.

Recommended Age and Weight Range

Joyrider

- The Joyrider is meant to be used BY ADULTS to transport small children not less than 12 weeks old.
- The Joyrider is designed to transport one child up to 5 years of age weighing no more than 75 lbs. (34 kg.)
- The total load limit including the child AND cargo is 85 lbs. (38.6 kg.)
- May not be appropriate for special needs children. Please consult with a physician before using.

Deuce Coupe

- The Deuce Coupe is meant to be used BY ADULTS to carry small children not less than 12 weeks old.
- The Deuce Coupe is designed to carry only two children up to 5 years of age weighing together no more than 100 lbs (45.4 kg.)
- The total load limit including the child AND cargo is 110 lbs. (49.9 kg.)
- May not be appropriate for special needs children. Please consult with a physician before using.

Fast Facts

product	weight of stroller	folded with wheels on
12" Joyrider	22lbs 1oz (10kg)	49x24x45"
16" Joyrider	22lbs 5oz (10.1kg)	52x24x45"
20" Joyrider	22lbs 9oz (10.2kg)	52x24x45"
16" Deuce Coupe	27lbs 2oz (12.2kg)	59x35x45"
20" Deuce Coupe	27lbs 2oz (12.3kg)	59x35x45"

③



Warning

Never leave child unattended in the stroller. Never let your child touch the wheels, rims or spokes.



Warning

Avoid serious injury from falling or sliding out. Always fasten child's five-point safety harness and adjust snugly and closely monitor child's activity while in the stroller.



Warning

Avoid runaways. Always use the tether wrist strap (marked "Safety") and never use on steep grades, inclines or hills.



Warning

Never allow horseplay in or around the stroller.



Warning

Never allow your child to stand in the stroller.



Warning

Never place your child's car seat inside your jogging stroller.



Warning

Never use your jogging stroller if the frame is in any way deformed or damaged.

- EACH time you use the jogging stroller, check its condition.
- Prior to each use of the stroller, make absolutely sure all bolts and fasteners are tight and that there is no damage to the frame.
- Before each and every use, make sure that the wheels are installed securely and the parking brake engages and holds tightly.
- Note that the aluminum frame structure will bend if handled roughly. Please take care to avoid mishandling of the jogging stroller by dropping the jogging stroller or slamming it in a car trunk, etc.
- If you discover that either a fastener is loose or you suspect the integrity of the frame has been compromised, discontinue use of the jogging stroller and return it to your nearest Kelty dealer.

Pay attention to your child. Your child's safety is ultimately determined by reading and following these instructions and by being prudent in how you use this product.

In addition, make sure your child is dressed properly for the weather. Although your activity generates body heat for you, your child is sitting still. Also be aware of your child's activity, and never give your child any type of object, food or drink while in the stroller.

④

-IMPORTANT-

Read all instructions carefully before using!

Use this Jogger Only for the Purposes Intended

- This jogger is designed to be used by adults and should not be pushed by children or young adolescents. It is not intended for use with animals.
- Never place more than one child in Joyrider at a time. Never place more than two children in Deuce Coupe at a time.
- Never place the jogging stroller on a raised surface (such as a picnic table) as child's movement can move jogging stroller to an edge resulting in severe head injuries.
- Never park on/near an incline or drop-off (steps, valleys, cliffs, etc.).
- Never use this jogging stroller while roller-skating, roller-blading or biking.
- Never allow the jogging stroller to be attached to or pulled by dogs, bicycles, automobiles, snowmobiles or other machines.
- Do not use while walking/running on loose rock (scree), or on especially steep terrain, uneven terrain, or in hazardous weather conditions.

Special Attention

- When attaching rear wheels, make sure quick release axles are completely pushed into place and engaged. Rock them back and forth to make sure they are installed securely and do not slip out.
- If carrying on a roof rack or in the back of a pickup truck, always anchor down the stroller securely.
- Maximum weight of cargo in the rear pocket is two pounds for the Joyrider, four pounds for the Deuce Coupe as excessive weight may cause instability or tipping.
- Make sure items in underseat basket are properly secured. The basket is not intended to hold animals of any type. Max. weight of cargo is 8 lbs (3.6 kg).
- If using this stroller at twilight or after dark, make sure you have adequate lighting to see and be seen.

5

- Avoid using on busy streets and in heavy traffic. Be especially careful at crosswalks. Always be aware of conditions around you.
- Do not strap bags or parcels to the handlebars as this may affect balance and may cause the stroller to tip over backwards.
- Do not use Accessories or Replacement Parts other than those produced or approved by Kelty as these may affect handling, stability and overall safety.
- A helmet for the passenger is strongly advised when jogging with this stroller, especially if used on uneven ground.
- If you feel faint, dizzy, nauseated or experience muscle pain while using jogging stroller, stop immediately.

Care and Maintenance

- Whenever possible, store your Kelty K.I.D.S. jogging stroller inside a garage or covered porch to keep it out of the elements. It is made of durable fabric and aluminum, but the sun and weather will take their toll.
- The seat is most easily washed with a sponge, cold soapy water and a hose for rinsing. Let it dry in the sun on the frame. It is best not to take the cover off the frame as this tends to shred the foam frame padding.
- Once per year (or more often if you jog a lot) you should take the stroller to a bike shop for routine maintenance including:
 - a) greasing/tightening the wheel bearings
 - b) wheel truing and alignment
 - c) brake pad adjustment or replacement.
- Check the wheels periodically to keep them inflated at the right pressure. The manufacturer's specifications are written on the side-wall of the stroller's tires.

Kelty K.I.D.S. Limited Lifetime Warranty-Jogging Strollers

Kelty K.I.D.S. takes pride in its workmanship and undertakes to manufacture the best possible products. Therefore, we warranty all Kelty K.I.D.S. strollers against defects in the materials or workmanship to the original buyer for the lifetime of the frame and the fabric. This warranty does not cover institutional or commercial use. This warranty does not cover tubes and tires. Since no Kelty K.I.D.S. product is indestructible, it does not cover defects attributable to or resulting from normal wear and tear, natural hazard damage, abuse, alteration, or UV damage. Service under this warranty is available to the original purchaser by returning the product to any authorized Kelty K.I.D.S. dealer with proof of purchase or to our Customer Service Department (return authorization required) by calling 1.800.423.2320. If we determine a defect exists in the material or workmanship of the product not caused by normal wear and tear or improper use or handling of the product, we will repair or replace it, at Kelty's discretion, free of charge, after returned without unnecessary delay. This warranty gives you, the original purchaser, specific legal rights. You may have other rights that vary from state to state.



6235 Lookout Road
Boulder, CO 80301
1.800.423.2320
www.kelty.com

Assembly and Folding Instructions

Assembly and fine-adjustment of brakes require no tools-- but you do need to read these instructions carefully.
page 1

I. Unpacking

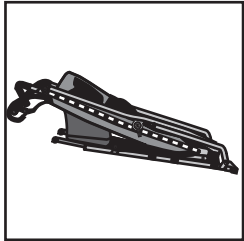


Figure 1

- A. Remove the stroller and wheels from the carton.
- B. Place stroller on the floor laying flat (see Figure 1) and set the wheels and hood aside.

II. The Front Wheel

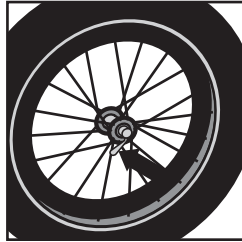


Figure 2

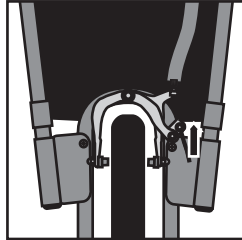


Figure 3

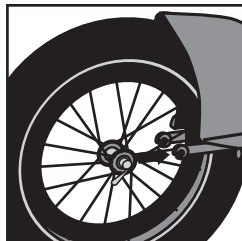


Figure 4

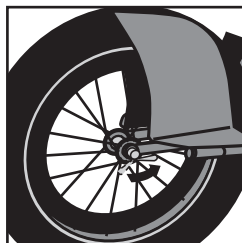


Figure 5

- A. Take a look at the wheels. There is a single front wheel with a lever type quick-release mechanism (see Figure 2).
- B. Start by making sure the quick release lever on the front brake is in the open position (see figure 3) so that the tire can fit past the brake pads.
- C. Insert the wheel axle into the front fork ends as shown in Figure 4.
- D. Clamp the Front Axle Quick Release Lever to secure the wheel to the fork as shown in Figure 5. Check to make sure the front wheel is securely attached to the front fork.
- E. With one hand, pinch the front brake calipers closed so the brake pads touch the front rim. Meanwhile close the quick release on the brake with the other hand. The brake pads should come to rest about 1/16 inch to 1/8 inch from the rim. You can adjust the tightness of the brake to the rim into this range by rotating the Cable Adjustment Barrel where the cable comes in to the brake caliper assembly.

III. The Rear Wheels



Figure 6

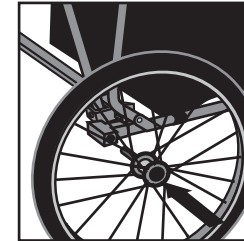


Figure 7

- A. There are two rear wheels with a skewer type quick-release mechanism (see Figure 6).
- B. You will notice that there is a black rubber button in the middle of the rear axle. This is the quick release button for the rear wheel.
- C. Push the button in with your thumb while inserting the rear axle all the way into the rear axle hanger on the frame (See Figure 7). Then let your thumb off the button. This releases the lock that holds the wheel in place.
- D. Check the quick release axles to make sure they are completely pushed into place and engaged. Without pushing the quick release black, rubber button, try to pull the axle back out of the rear axle hanger. It should be firmly locked in place. (If it comes out, repeat step C and then step D. If either rear axle does not lock in place securely, do not use the stroller. Return to your Kelty dealer immediately for replacement).

Assembly and Folding Instructions

Assembly and fine-adjustment of brakes require no tools-- but you do need to read these instructions carefully.
page 2

IV. Opening the Stroller and Operating the Foot Locking Mechanism



Figure 8

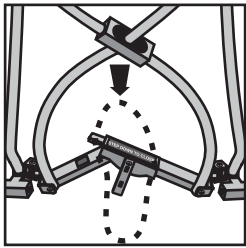


Figure 9

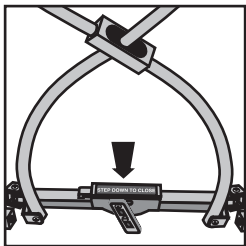


Figure 10

- A. This stroller operates in a way similar to a standard umbrella stroller. Look at Figures 8-10 to get a general idea of how it functions.
- B. Lift up on both handle-bars at the same time and move them gently toward the rear of the stroller and outward as in Figure 8. Make sure none of the fabric seat or other parts are catching or binding.
- C. Once you have the handle bars in an upright position, push the stroller forward. This allows the back wheels to start spreading out towards their use position.
- D. As you continue to push the handlebars outward while rolling the stroller forward, push your foot gently downward on the Locking Mechanism (See Figures 9 and 10). Do not kick the locking mechanism or jump on it. Do not push it forward or backward. It should be pushed with a slow and consistent motion straight downward.

V. Brake and Parking Brake Operation

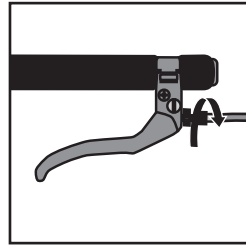


Figure 11

- A. Your stroller comes with a dual-purpose brake (see Figure 11). It can be used to slow down the stroller while jogging. With the locking mechanism engaged, it acts as a parking brake.
- B. Caution-- Never leave your child unattended in the stroller when the parking brake is engaged. Never count on the brake to prevent the stroller from sliding or rolling away on an incline. Always use a safety tether when your child is in the stroller.
- C. To lock the brake in the parking position, squeeze the brake lever to apply the brake. Then push the locking mechanism down while releasing the lever.
- D. To release the locking button, simply squeeze the lever and the locking button will release automatically.
- E. You can adjust the brake at the lever by turning the barrel adjustment mechanism (see Figure 11). Always make sure that the brake is adjusted so that it engages tightly and securely.

VI. Folding the Stroller

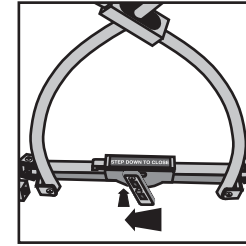


Figure 12

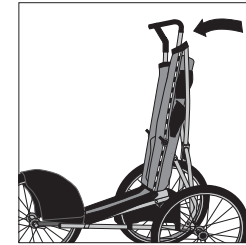


Figure 13

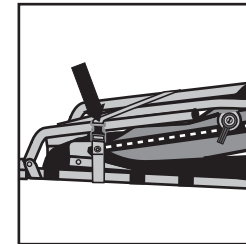


Figure 14

- A. Never fold the stroller while a child is in or on it. Never fold the stroller while it contains any cargo in the pockets.
- B. Always put the hood in fully retracted position before folding the stroller for storage. If you do not do this, the hood or hood rod holders may be damaged.
- C. Hold the hand brake lever.
- D. Push the lever on the Folding Mechanism to the left with your foot and then lift your foot to disengage the lock (Figure 12). Meanwhile push the handlebars gently forward until in fully folded position (see Figure 13).
- E. Use the Hold-closed strap as shown in Figure 14 to keep the Stroller from opening.

Assembly and Folding Instructions

Assembly and fine-adjustment of brakes require no tools-- but you do need to read these instructions carefully.
page 3

VII. Installing and Using the Sun/Rain Hood

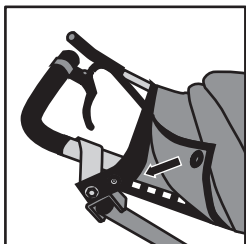


Figure 15

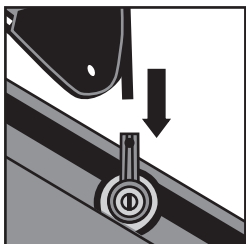


Figure 16

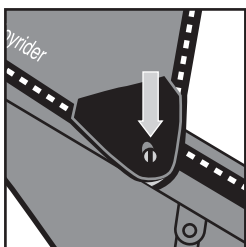


Figure 17

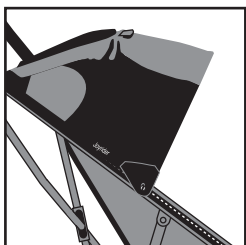


Figure 18

A. Do not install the sun/rain hood while the child is in or near the stroller.

B. First, attach the female snaps on the sun/rain hood to the male snaps at the top of each side of the stroller (see Figure 15).

C. Bend the acetel plastic support rod gently until you can insert the rod ends into the two rod holders (See Figure 16).

D. Lock the rod in place by slipping the buttonhole on the two side corners of the hood over the small steel posts (See Figure 17).

E. The sun/rain hood can be folded between three basic positions-- fully-retracted, normal position for partial protection and fully extended (see Figures 18 & 19). To reach the fully extended position, undo the hook-and-loop fasteners in the middle of the hood.

F. Always put the hood in fully retracted position before folding the stroller for storage.

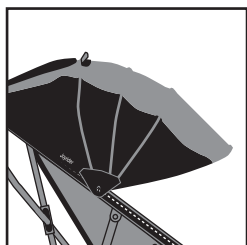


Figure 19

VIII. Adjusting your Child's Five-Point Safety Harness

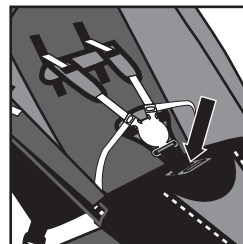


Figure 20

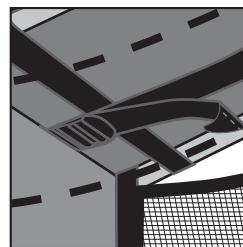


Figure 21



Figure 22

A. Before loading your child into the stroller, make sure that you check to see if the crotch strap is properly threaded through the tri-glide buckle underneath. (see Figure 19).

B. The crotch strap has two position slots to grow with your child (see Figure 20). The slot that is closer to the back of the seat is for smaller size children, with the other slot being for older children. You can also adjust the strap up or down for additional room for your child depending on their size.

C. Unbuckle both sides of the yellow "Y" Kelty K.I.D.S. buckle.

D. Adjust the length of the shoulder straps to fit your child by sliding the tri-glide buckles up and down (located behind the little backpanel that has the Kelty K.I.D.S. logo stitched on it in the logo should be against your child's back).

E. Now you are ready to lower your child into the stroller, making sure that those little legs are on either side of the crotch strap.

F. Next, making sure that there is a gray webbing strap over each individual leg (similar to a five-point carseat), buckle the yellow "Y" buckle into place.

G. Finally, tighten the leg straps gently on each side of the child seat area so that the leg straps fit comfortably over your child's legs.

H. Check to see that the shoulder straps fit smoothly over your child's shoulders with no big gaps, that the backpanel rests at the base of your child's shoulder blades, and that the leg straps are not binding or uncomfortable. (see Figure 22)